




# HOW TO MOUNT THE ALPRIDE SYSTEM

ELEVATE YOUR SAFETY

 **alpride**  
airbag system


  
**SCOTT**

1

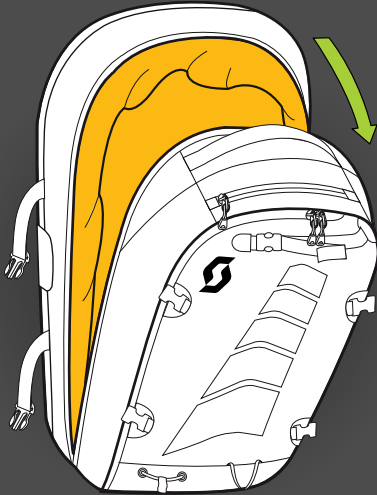


OPEN THE BACKPACK

2

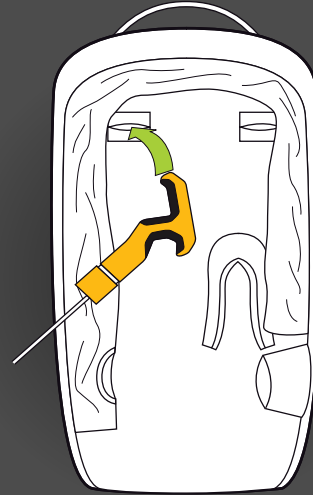

INSERT THE TRIGGER IN THE SHOULDER STRAP

3

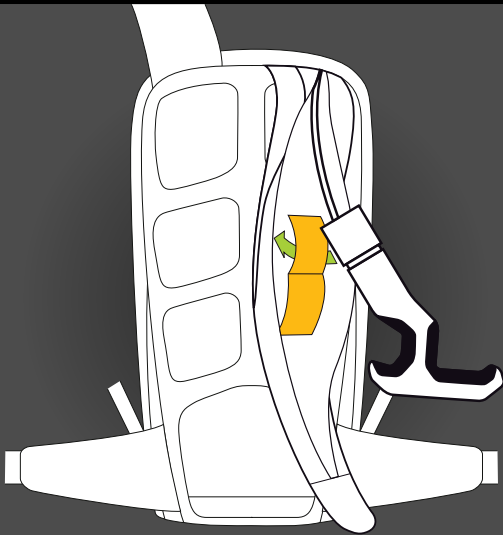


CLIP THE TRIGGER ON THE SHOULDER STRAP WEBBING

4




FULLY OPEN THE AIRBAG COMPARTMENT ZIPPER

5

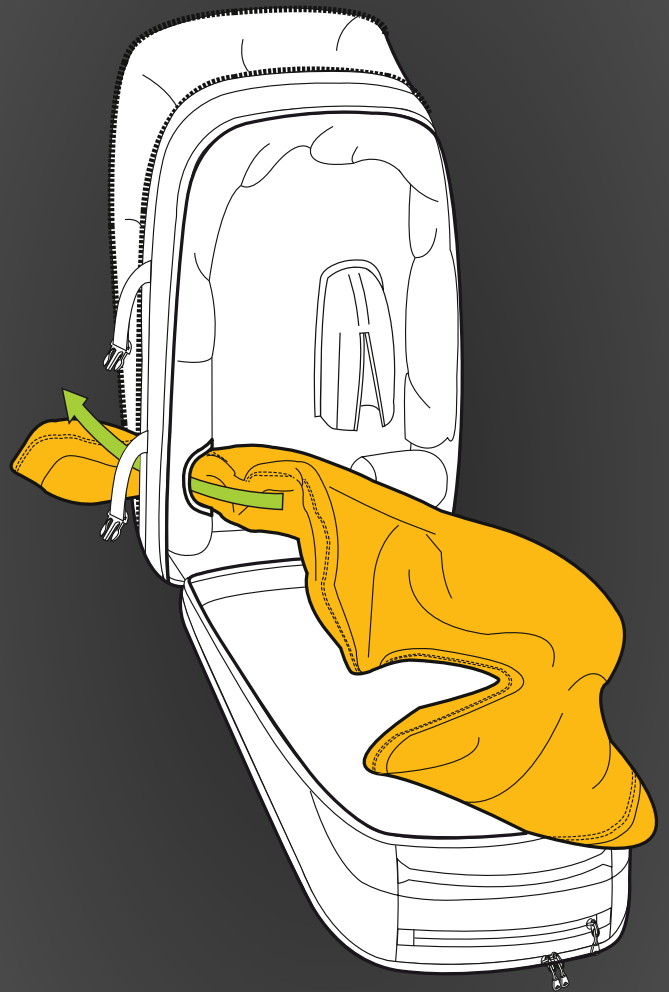


PUT THE AIRBAG THROUGH THE HOLE

6

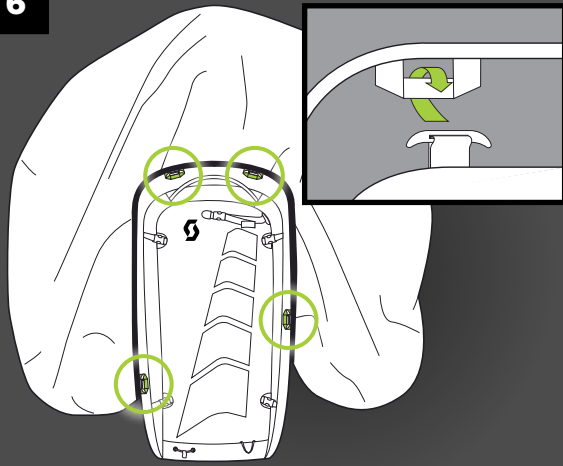

INSERT ALL FOUR HOOKS


DO NOT...

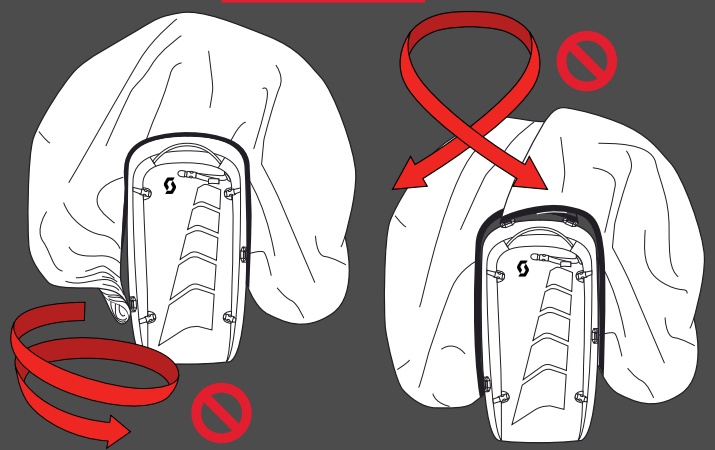

...TWIST THE AIRBAG


...CROSS THE HOOKS

7

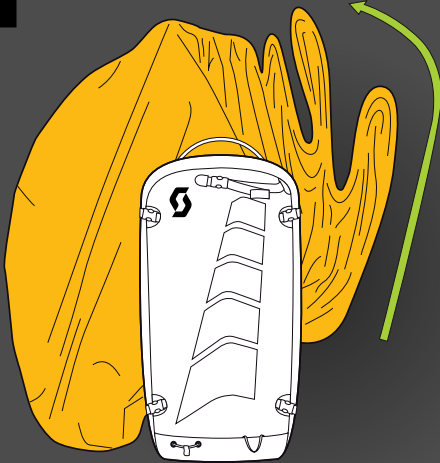

PUSH THE AIRBAG ON THE RIGHT SIDE TOWARDS THE TOP


DO NOT...

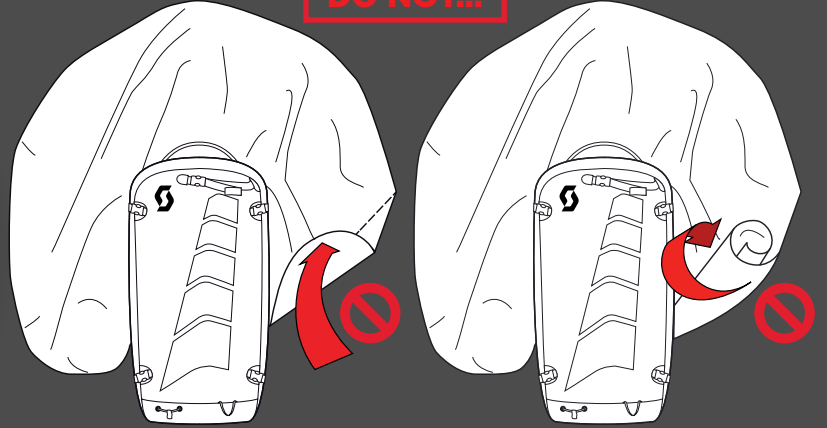

... FOLD THE AIRBAG

... ROLL THE AIRBAG

8

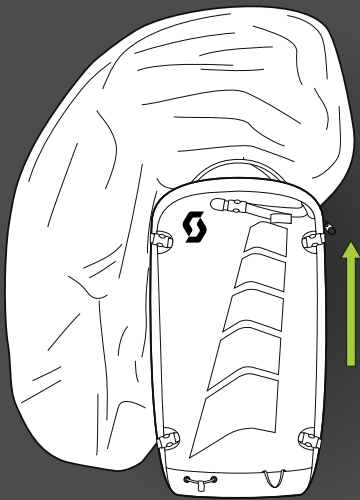

CLOSE THE ZIPPER




9




PUSH THE AIRBAG TOWARDS THE LEFT AND PUSH THE UPPER PART TOWARDS THE RIGHT. LEFT HAS TO OVERLAY THE RIGHT PART

10

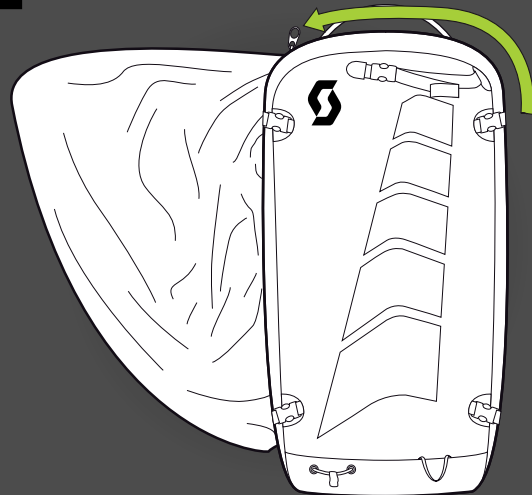


CLOSE THE ZIPPER

11

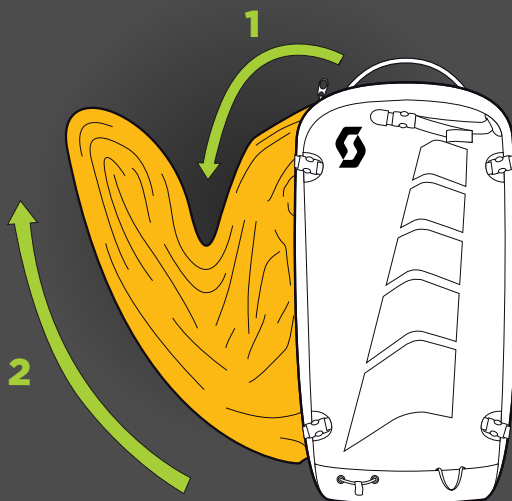

PUSH THE AIRBAG TOWARDS THE BOTTOM AND PUSH THE LOWER PART TOWARDS THE TOP.


12

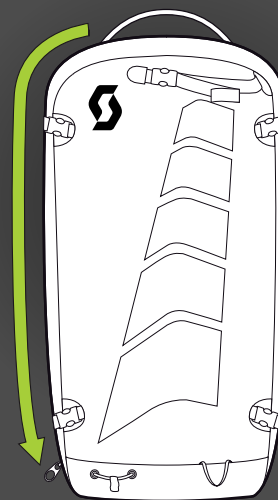

CLOSE THE ZIPPER COMPLETELY




13

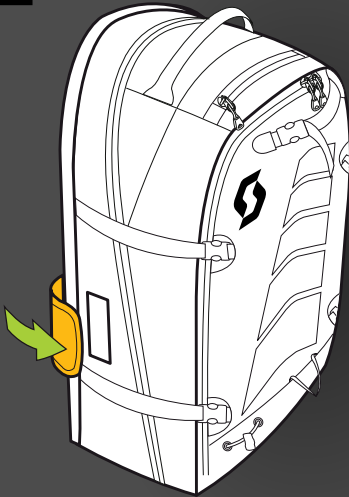


CLOSE THE VELCRO

14

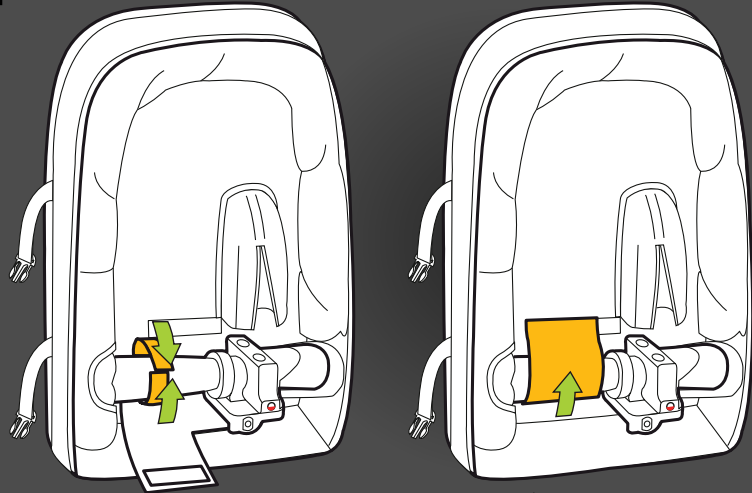


CLOSE VELCRO AND THE FLAP

15

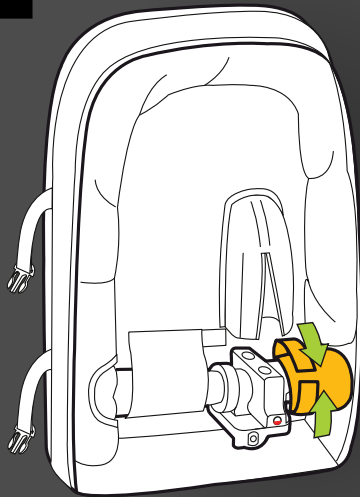

PUT THE MESH AROUND THE INFLATOR AND CLOSE THE VELCRO

16

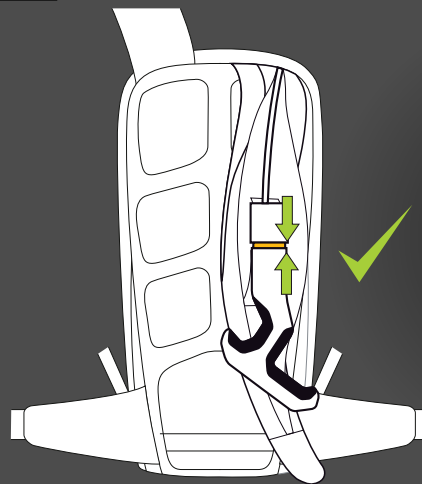


PUT THE HANDLE ON THE UPPER POSITION

NO



17

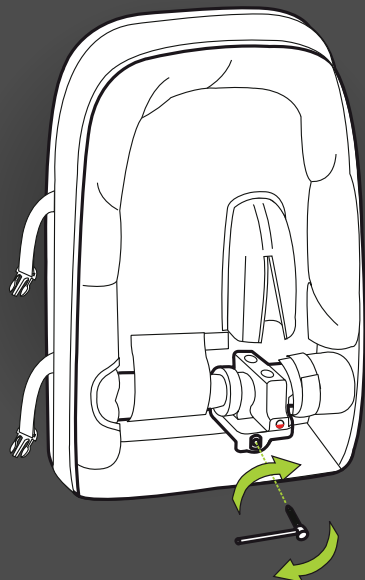


LOAD THE DEVICE BY SCREWING THE TOOL CLOCKWISE TO THE VERY END

18



UNSCREW THE TOOL. SYSTEM IS READY TO USE IF THE RED PIN HAS BEEN DISAPPEARED

19

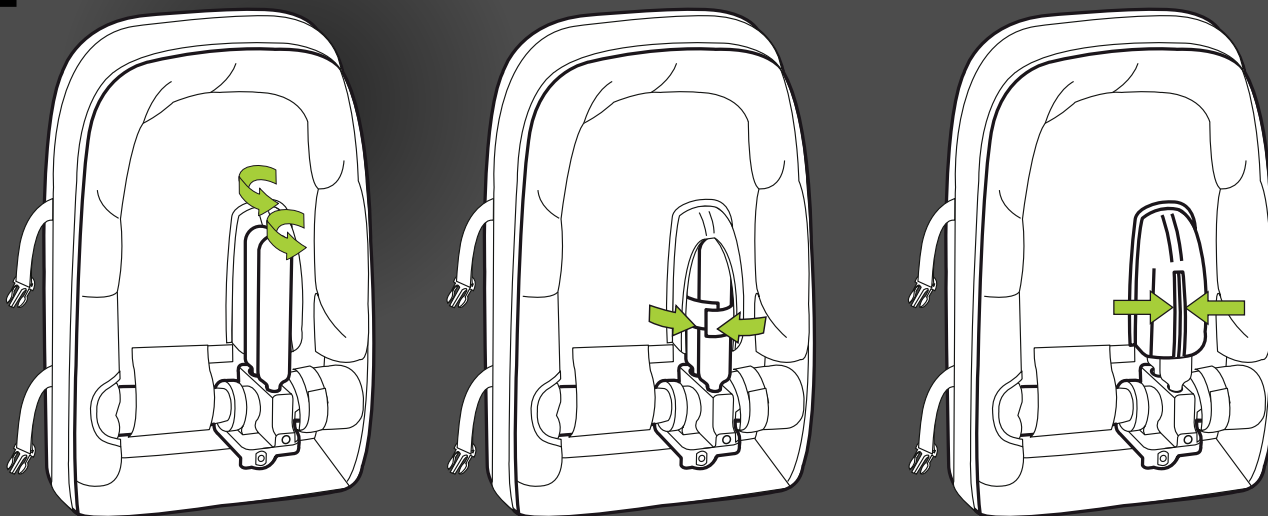

SCREW THE CARTRIDGES IN AND FIX THEM WITH THE VELCRO STRAP AND CLOSE THE ZIP POCKET



[www.scott-sports.com](http://www.scott-sports.com)

All rights reserved ©2014 Scott Sports  
Specifications subject to change without notice

Scott Sports SA | CH-1762 Givisiez  
Phone: +41 26 460 16 16