

HOW TO RELOAD THE ALPRIDE SYSTEM

ELEVATE YOUR SAFETY






1




OPEN THE BACKPACK

2

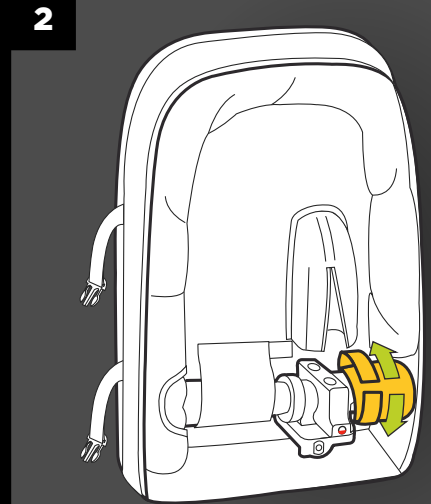


OPEN THE VELCRO AND PULL THE INFLATOR OUT OF THE MESH

3

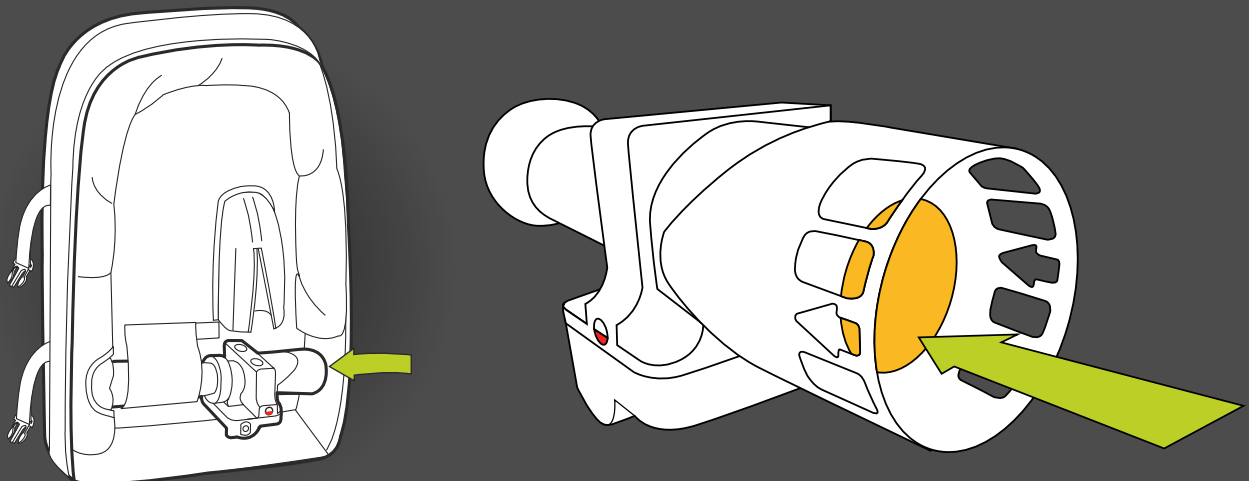


PUSH THE VALVE TO DEFLATE THE AIRBAG

4

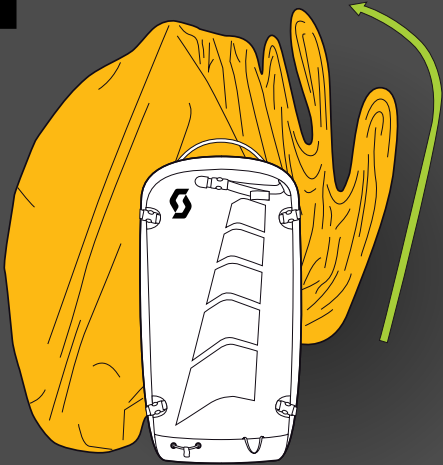

PUSH THE AIRBAG ON THE RIGHT SIDE TOWARDS THE TOP

DO NOT...

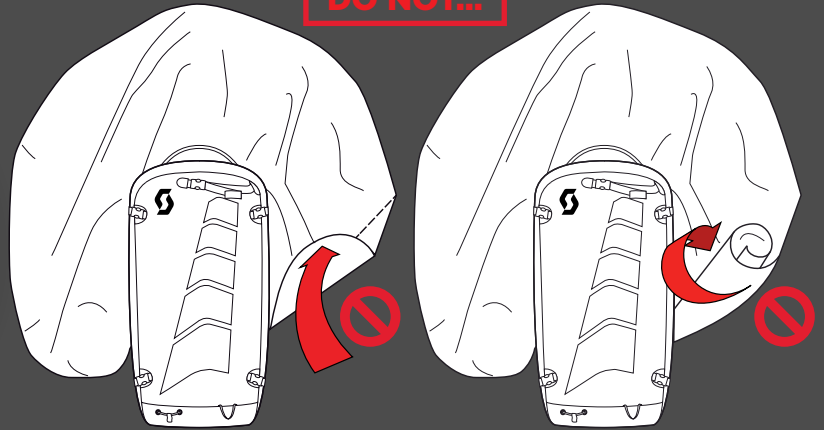

... FOLD THE AIRBAG

... ROLL THE AIRBAG

5




CLOSE THE ZIPPER

6




PUSH THE AIRBAG TOWARDS THE LEFT AND PUSH THE UPPER PART TOWARDS THE RIGHT. LEFT HAS TO OVERLAY THE RIGHT PART

7

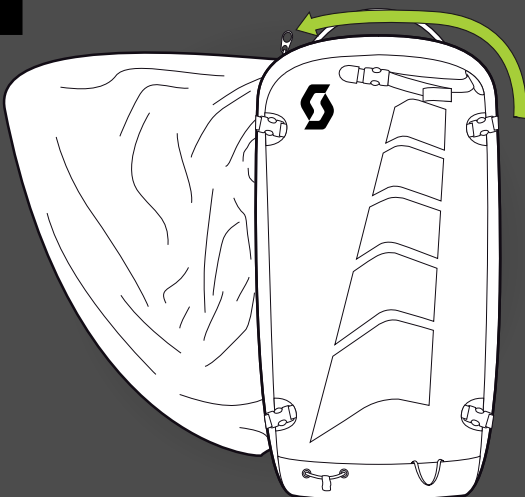


CLOSE THE ZIPPER

8

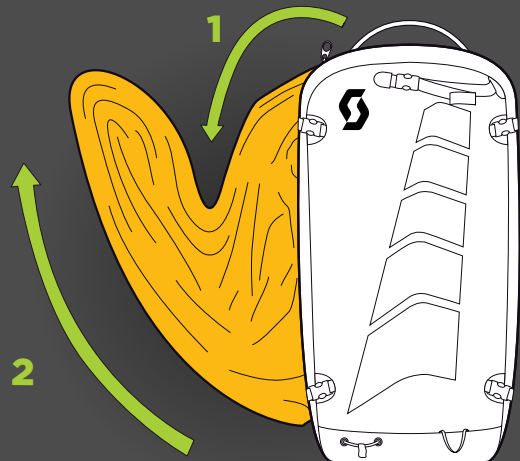


PUSH THE AIRBAG TOWARDS THE BOTTOM AND PUSH THE LOWER PART TOWARDS THE TOP.

9

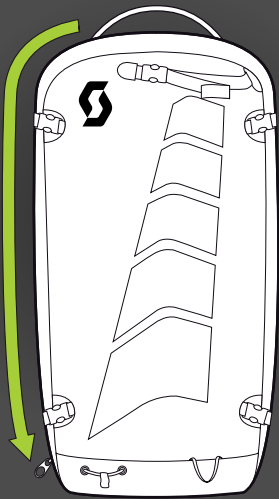


CLOSE THE ZIPPER COMPLETELY

10

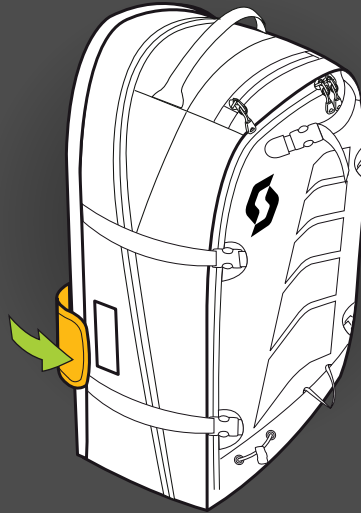


CLOSE THE VELCRO

11

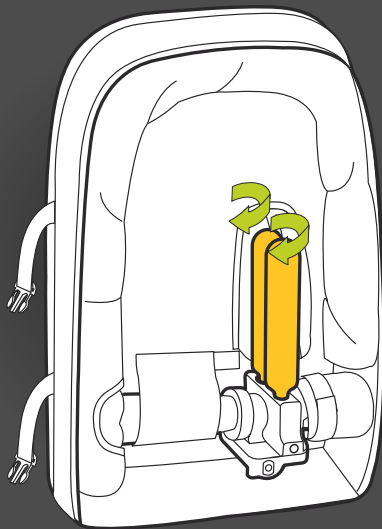


UNSCREW THE CARTRIDGES

12

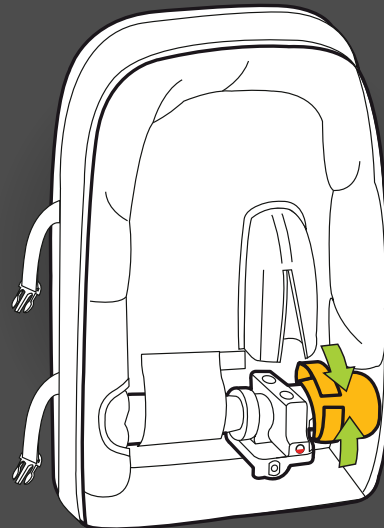


PUT THE MESH AROUND THE INFLATOR AND CLOSE THE VELCRO


13

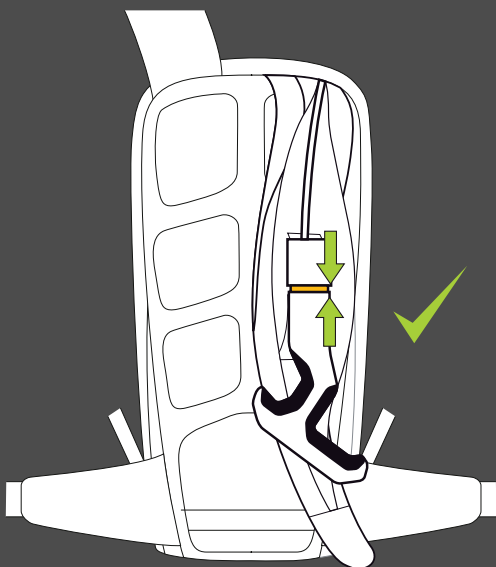

PUT THE HANDLE ON THE UPPER POSITION

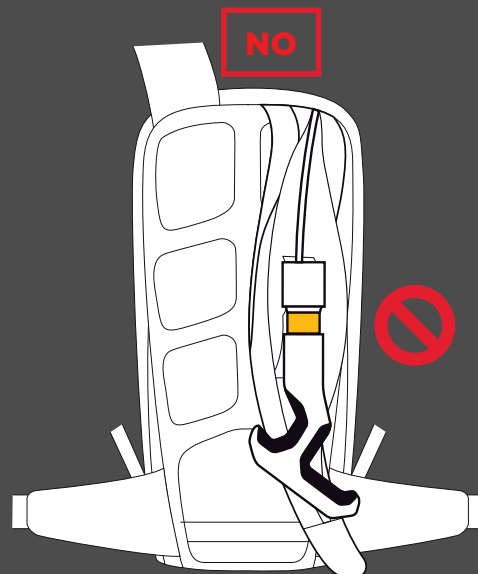


14

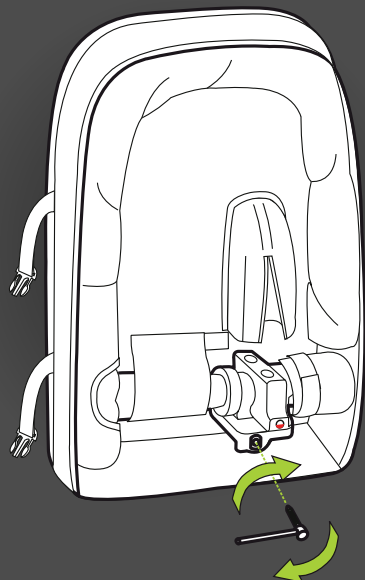


LOAD THE DEVICE BY SCREWING THE TOOL CLOCKWISE TO THE VERY END

15

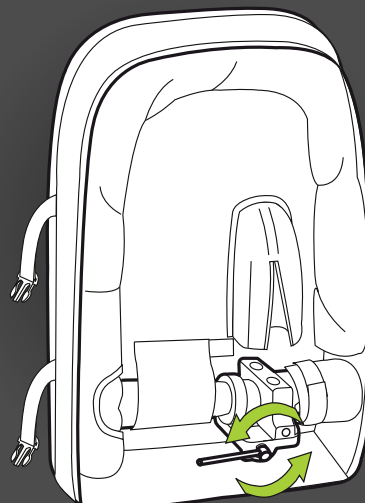

UNSCREW THE TOOL. SYSTEM IS READY TO USE IF THE RED PIN HAS BEEN DISAPPEARED

16

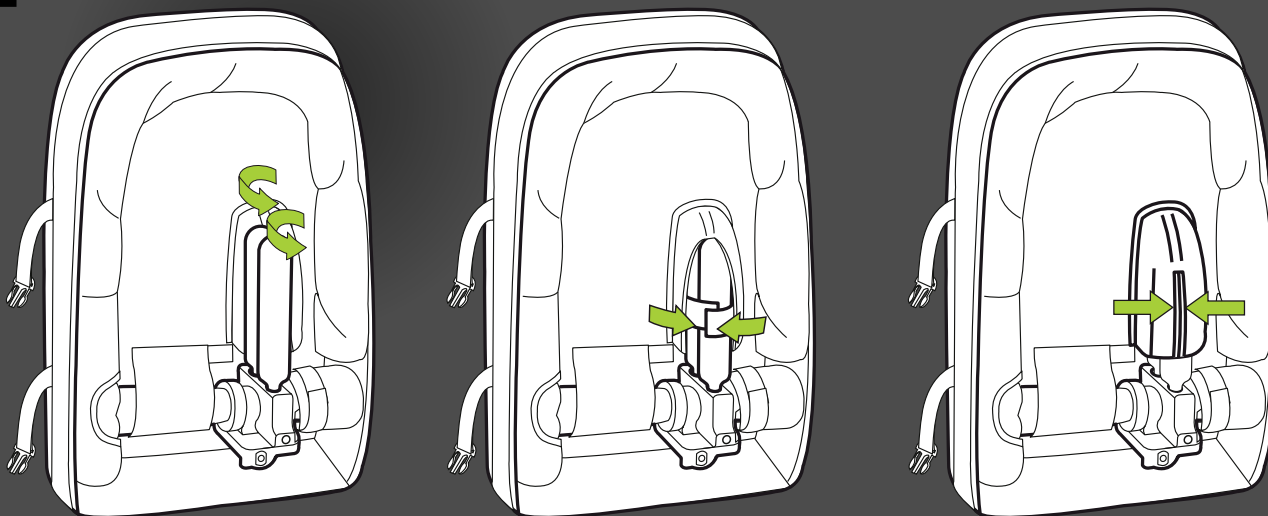

SCREW THE CARTRIDGES IN AND FIX THEM WITH THE VELCRO STRAP AND CLOSE THE ZIP POCKET



www.scott-sports.com

All rights reserved ©2014 Scott Sports
Specifications subject to change without notice

Scott Sports SA | CH-1762 Givisiez
Phone: +41 26 460 16 16